

Barco Recommendations for optimal FSN system operation

- 1) Use CAT5e or CAT6 Ethernet cables
- 2) Use an Ethernet switch to connect FSN-150 to Ethernet port 1. Make connections from switch to FSN-1400 frame, RCP-120s and PC or MAC running GUI. We don't test and we don't recommend connecting other devices on the 'FSN Network'. If you are just using an FSN-150 and a FSN-1400 frame you can simply use an Ethernet cable to connect them directly.
- 3) Use SAVE ALL often, and once after you configure your show.
- 4) Save a SYS memory at register 1000 as a known restore point once your system setup is complete
- 5) Backup your show to a USB stick once your setup and programming is complete
- 6) Download the free GUI for PC or Mac and use for redundancy/backup

Link to FSN GUI:

<http://www.barco.com/en/mybarco/mysupport/productsupport/product-support-files/software/software-detail?nr=08-0702205-00&rev=008004001000>

- 7) Transfer settings from Console to PC or MAC. Watch appropriate Youtube video for instructions

PC GUI Backup video from FSN-150:

http://www.youtube.com/watch?v=LQ_kwcGYk5E&list=UU030EFOacOPLoBBrgpnT8xQ

MAC GUI Backup video from FSN-150:

<http://www.youtube.com/watch?v=l7roO5YV818&list=UU030EFOacOPLoBBrgpnT8xQ>